

## **Artsound Bluetooth speaker: Change Name + Password**

Warning: Please do not change any other information than the name and PIN.

The Bluetooth speaker PCBA voltage is safe (below 24v).

### **1. Tools Needed**

- CSR USB-SPI + cables
- Blue suite software



### **2. Step 1: Software Installation**

Download [this folder](#).

Install CSR Bluesuite 2.5.0


### 3. Step 2: Connection

- Connect the CSR USB-SPI to the speakers.
- Put some pressure on the connectors to be sure there is a solid connection.
- Connect the CSR USB-SPI to your pc with the USB Cable.

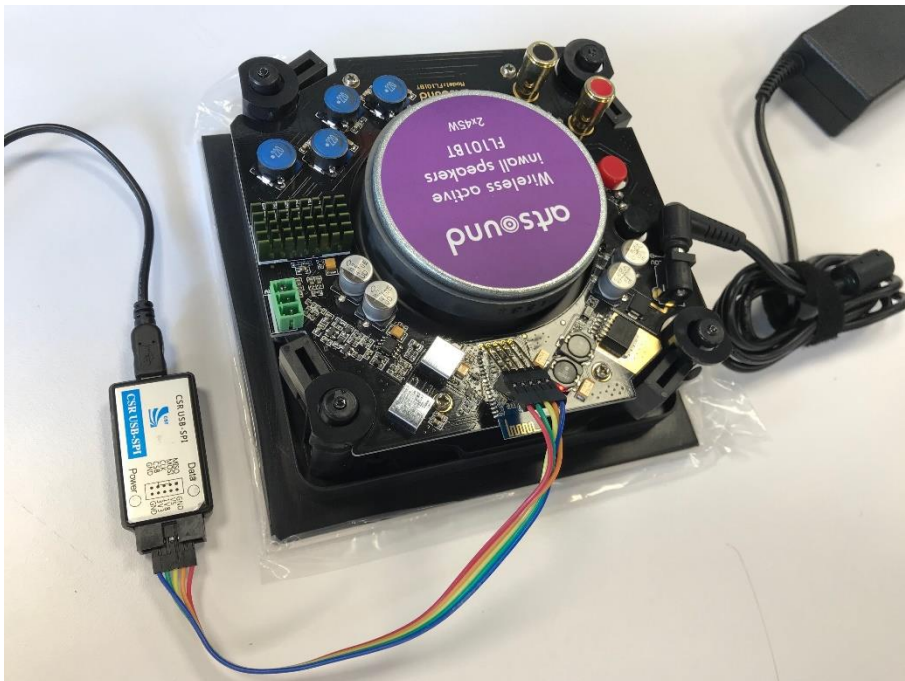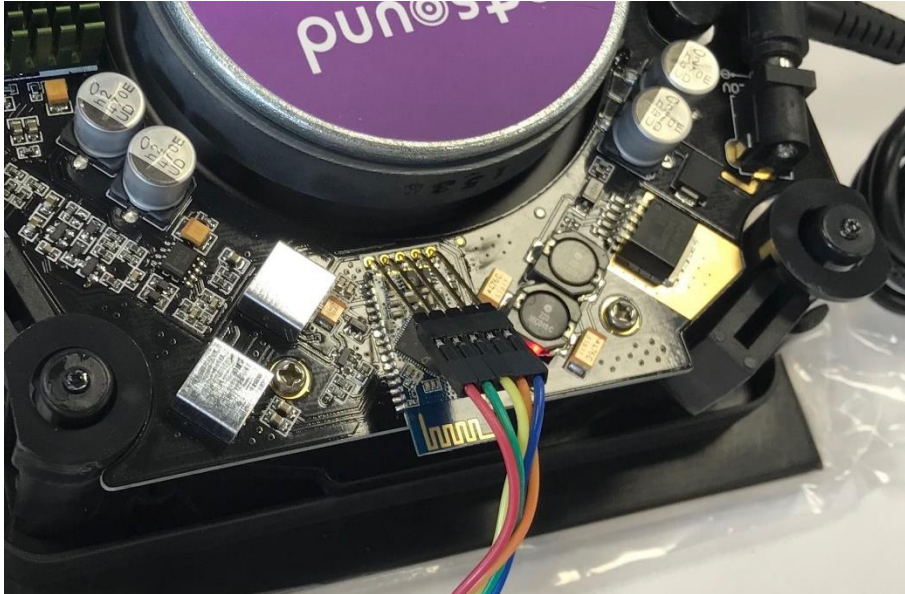


#### 4. Step 3: Changing name & PIN


- Search for PSTool and open the program.

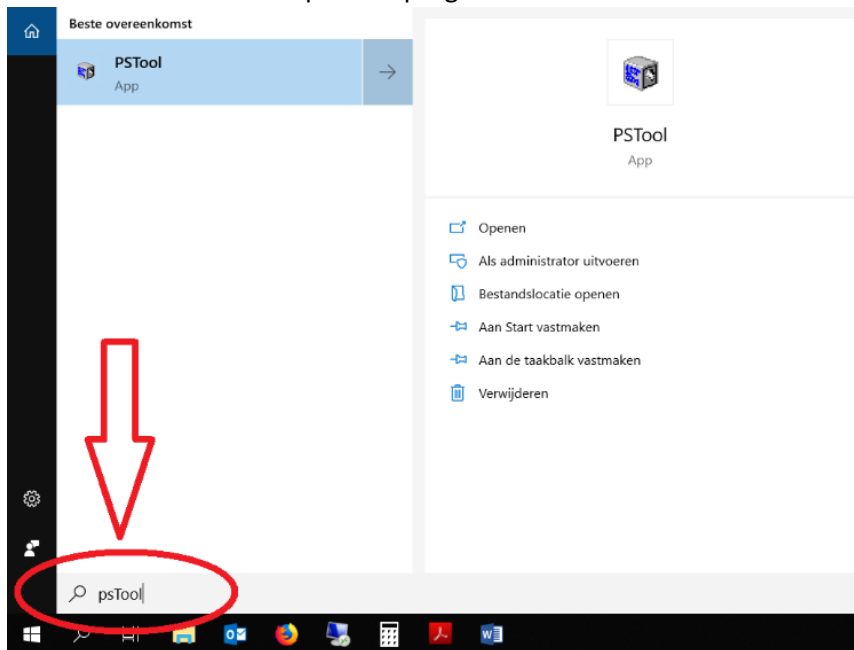


- Select 'SPI BCCMD' and 'USB SPI'
- Click on the OK button

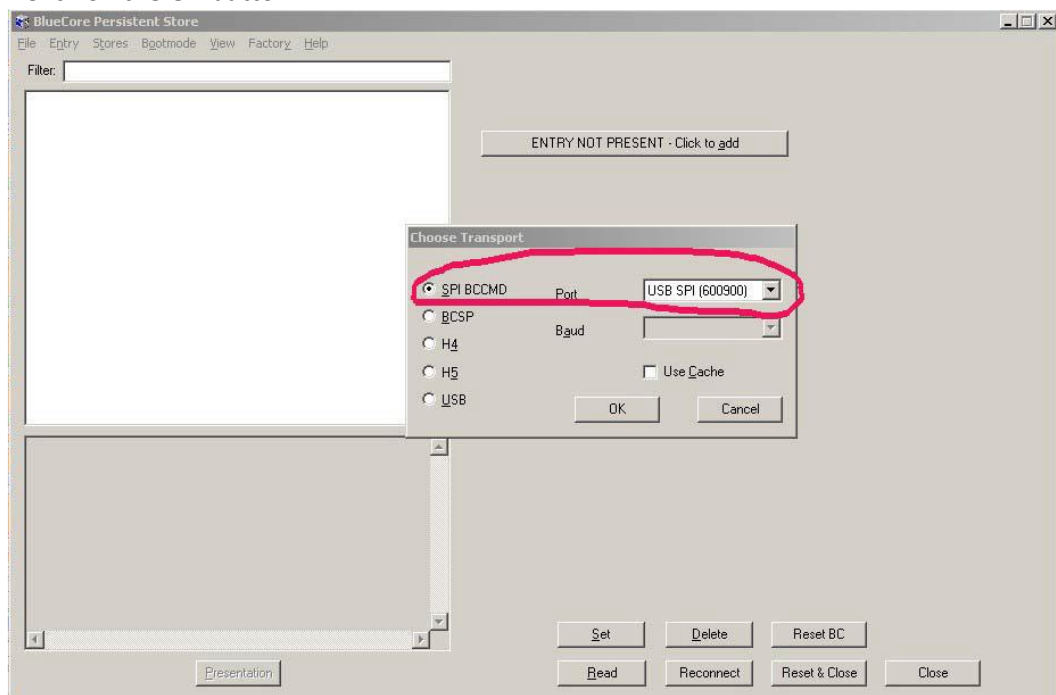


- Type 'name'
- Click on 'Local devices "user friendly" name'

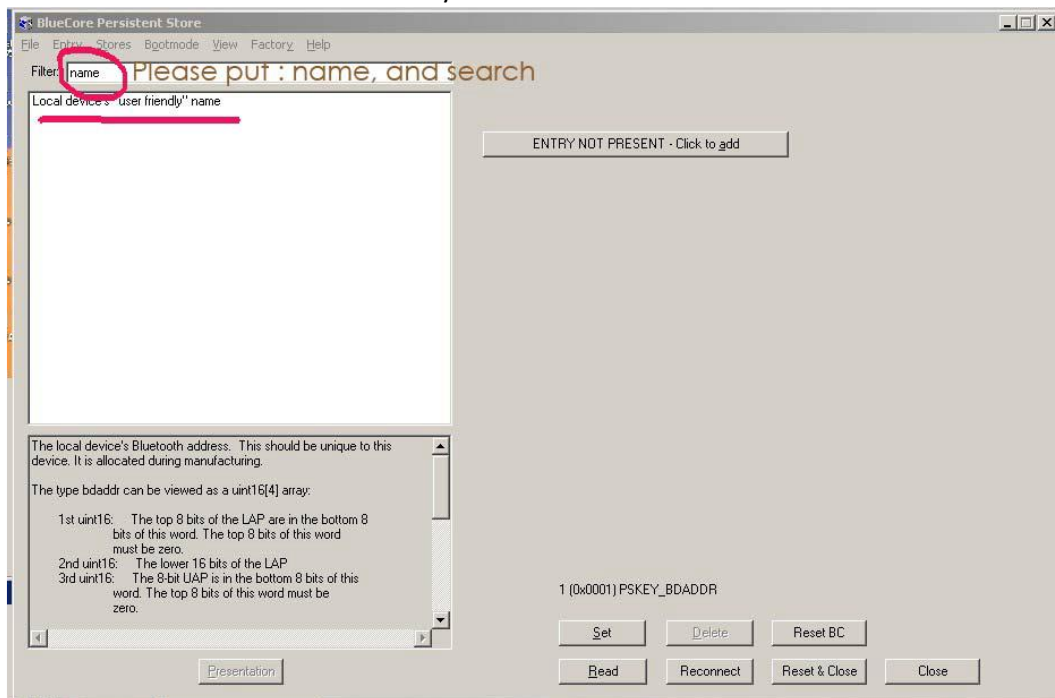

- Type your wanted named
- Click on Set

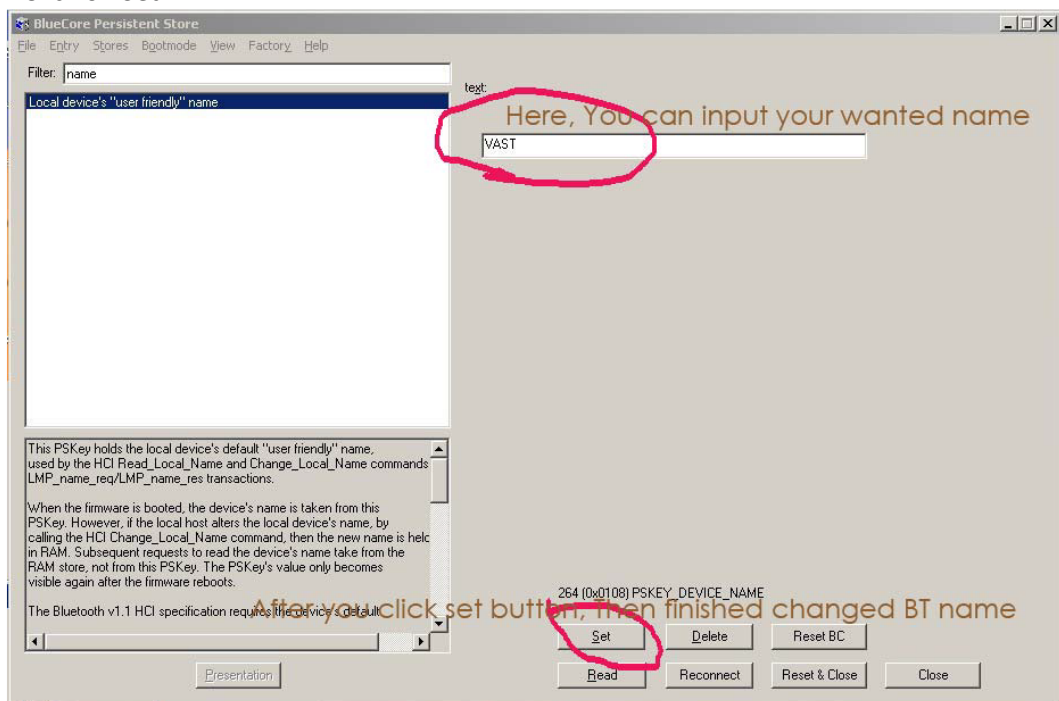

- Type 'pin'
- Click on 'Fixed PIN'
- Change the last digit of each series to the wanted PIN
- Close the program

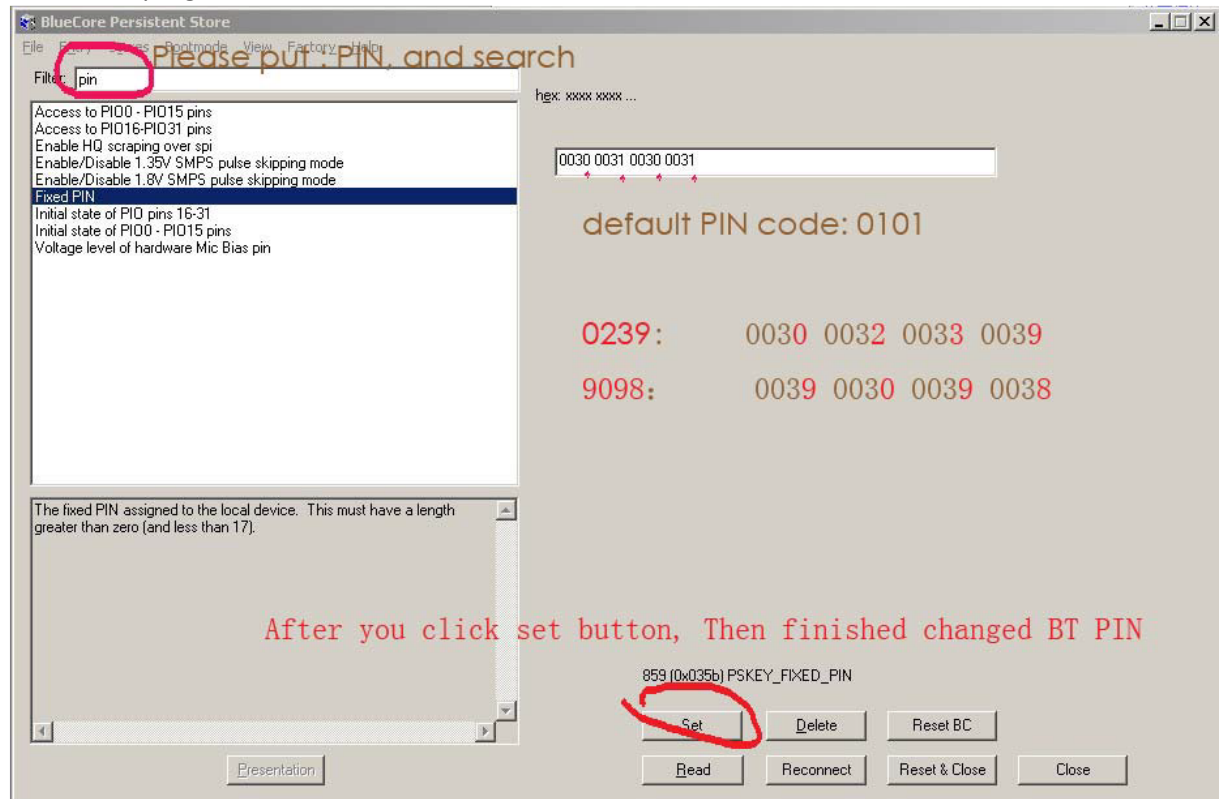

#### 5. Step 4: Activating change

- Disconnect the CSR USB-SPI from the speaker and pc
- Cut off power of the speaker
- Reconnect power of the speaker
- The changes are now in place